



# T.W.R. Window and Door Measuring Information

## Quick guide

**Measure top middle and bottom horizontally and vertically and the diagonally to check the opening is square**

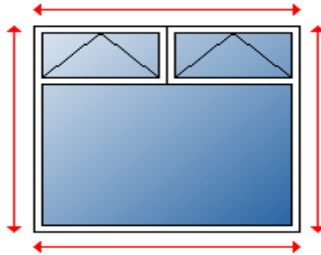

- Measure from brick to brick, not your window frame sizes.
- Make sure you measure your window at the bottom, at the top and at both sides as the size may vary as shown in the diagram above.
- Once measured deduct 10mm overall e.g. if your window measures 800mm high by 1000mm wide the new sizes will be 790mm x 990mm.
- Email, post, or ring us with your window sizes and window styles and we can give you a supply only quotation.

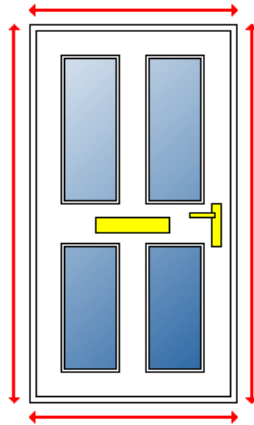

- Measure from brick to brick, not your doorframe sizes.
- Make sure you measure your door at the bottom, at the top and at both sides as the size may vary as shown in the diagram above.
- Once measured deduct 10mm overall e.g. if your door measures 2100mm high by 900mm wide the new sizes will be 2090mm x 890mm.